





Secure the wall mounting plate (C) with screw (D) in the Plastic wall Mounts (B).

Tighten the lamp canopy (E) with side Screw (F) to the mounting plate (C).

Secure the Light Bulb (H) / E27 into the Plastic Lamp Holder (I).

To prevent the risk of fire, do not use bulb with wattage greater than 13W CFL, 15W LED & 25W Regular Bulb.

* IF THE EXTERNAL FLEXIBLE CABLE OR CORD OF THIS WALL LAMP NEED TO BE CHANGED IT SHOULD ONLY BE REPLACED BY A QUALIFIED ELECTRICIAN